

1. Cut all corresponding paper pattern pieces and stick the pieces together using glue or tape.

Cut out pattern pieces out of your chosen fabric.

If adding any labels or decorative elements, add these before assembly.



2. Place the 2 pocket pieces, right sides together. Ensure the corners all meet up, pin or clip in place.

Sew all the way around leaving a gap at the bottom to turn through.

Turn through, ensure the edges in the gap are turned inwards, press in place.

Save the pocket for later.



3. To make the strap connector, fold the pieces in half and press. Open the fold and fold the raw edges into the middle, fold the edges over to the middle again and press to conceal the raw edges. Top stitch, one or two lines, depending on your preference, down both sides of the connector.

Slide a Link onto the connector piece, baste stitch the two edges together to hold the Link onto the loop.



4. To create the adjustable strap, thread the adjustable buckle on to one end of the strap, over the central piece of the buckle. Use rivets or sew to secure the buckle in place at the end of the long strap.

Thread one of the swivel clips onto the strap, fold over the long end to then thread the raw end through the outer edge of the buckle. This will make a complete loop to hold the clip. Save the now complete strap for later.



5. To create the waist straps. Fold the straps in half along the long edge and press with your iron, open the fold and fold the raw edges to the middle, press. Fold the strap in half again and press. This piece should now be 1 1/2 inch wide. Top stitch, one or two lines, depending on your preference, down both sides of the strap.

Repeat for the other strap(s). Put the straps to the side for later.

If no straps are required, skip ahead to step 6.



6. Using chalk or pen, mark out on the front piece of the apron where to place the top of the pocket and also the centre mark of the apron.

Match the centre of the pocket to the central mark the top corners of the pocket along the marked line. Pin or clip in place.



7. Top stitch around the three sides of the pocket, ensuring to catch the gap of the pocket leaving the pocket top open.



8. Take the adjustable neck strap, with the raw edges pointing upwards so that the loop faces downwards, pin or clip the strap to the front side of the top of the apron front. When turned through this will allow the straps to point in the correct direction.

Taking the two waist straps, with the raw edges pointing outwards, line up to the corner of the main section of the apron, pin or clip in place.



9. Using the remaining apron piece, place this on top of the front piece, right sides together. Line up all of the edges, sandwiching the raw ends of the straps. Pin or clip in place.




10. Sew all the way around the apron using a 1/4inch seam allowance, leaving a gap at the bottom to turn through.

Turn through, ensure the edges around the gap are all neatly pushed in. Top stitch all the way around being careful to catch the edges to close up the gap.

Your apron is now complete.

1inch
test
square

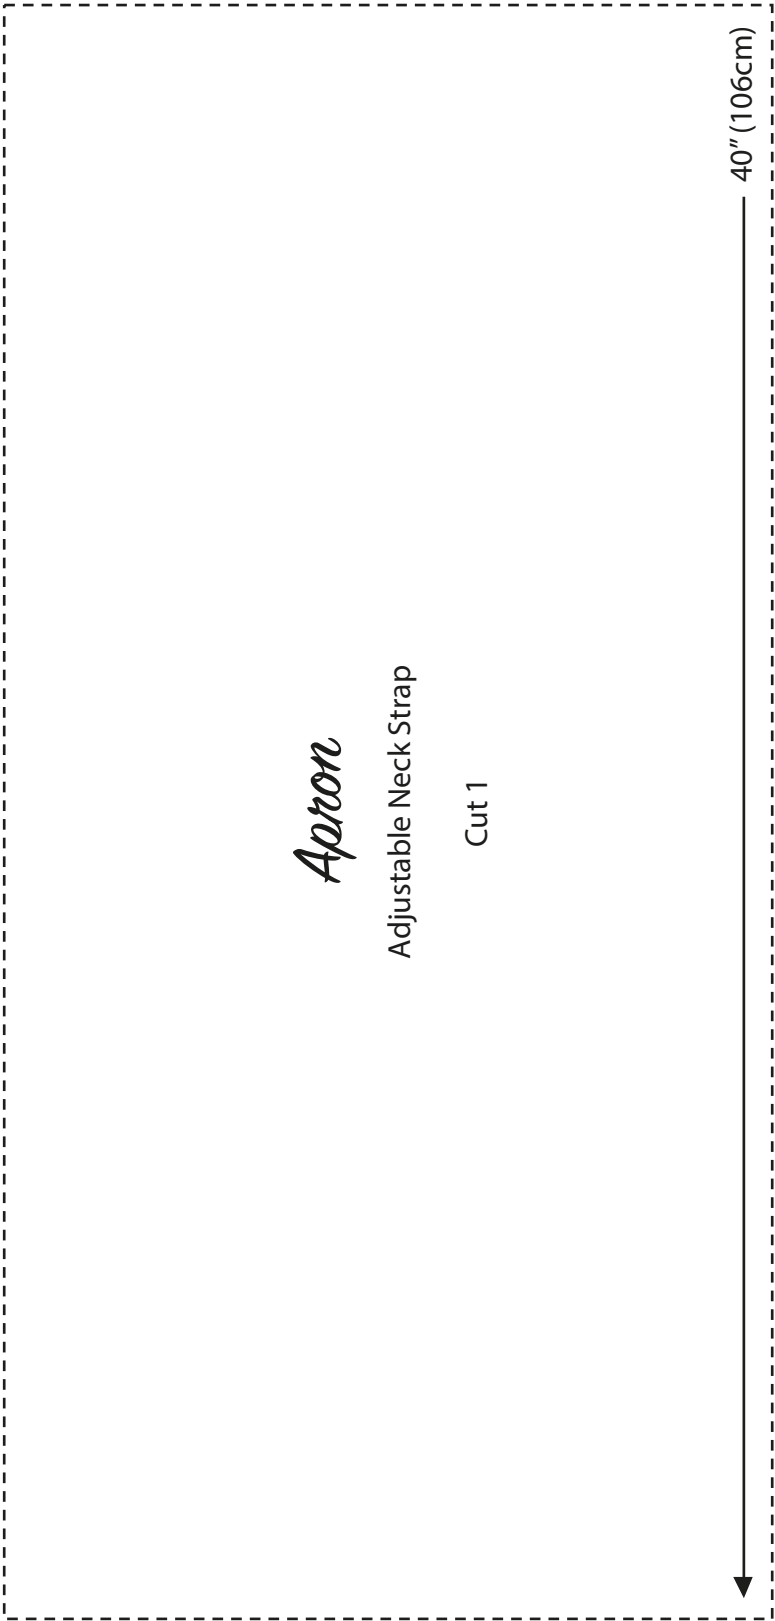



Apron

Adjustable Neck Strap

Cut 1



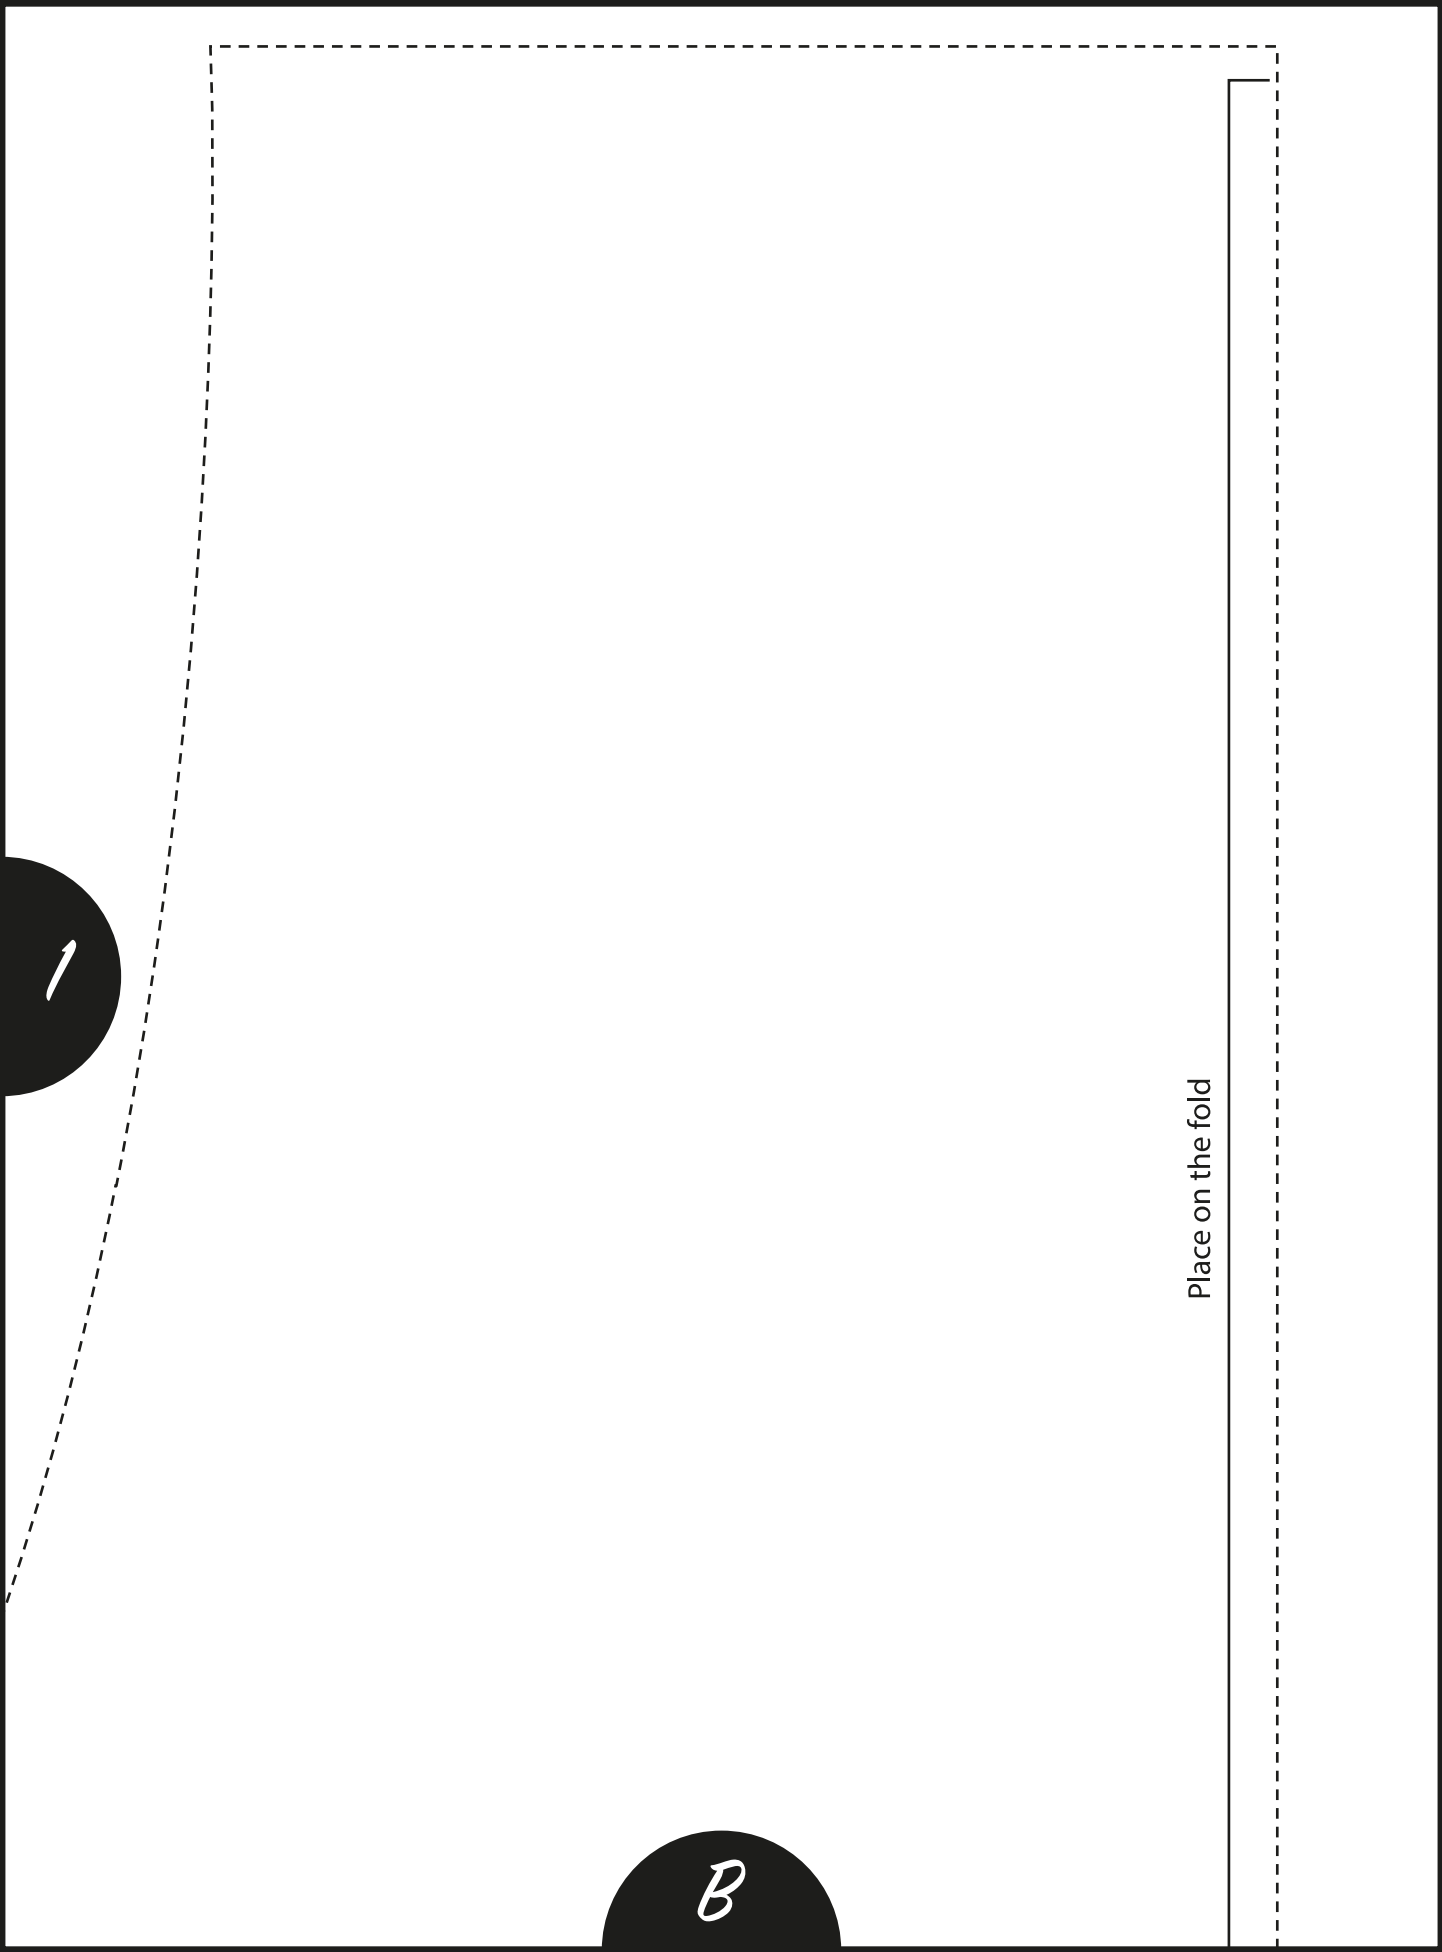


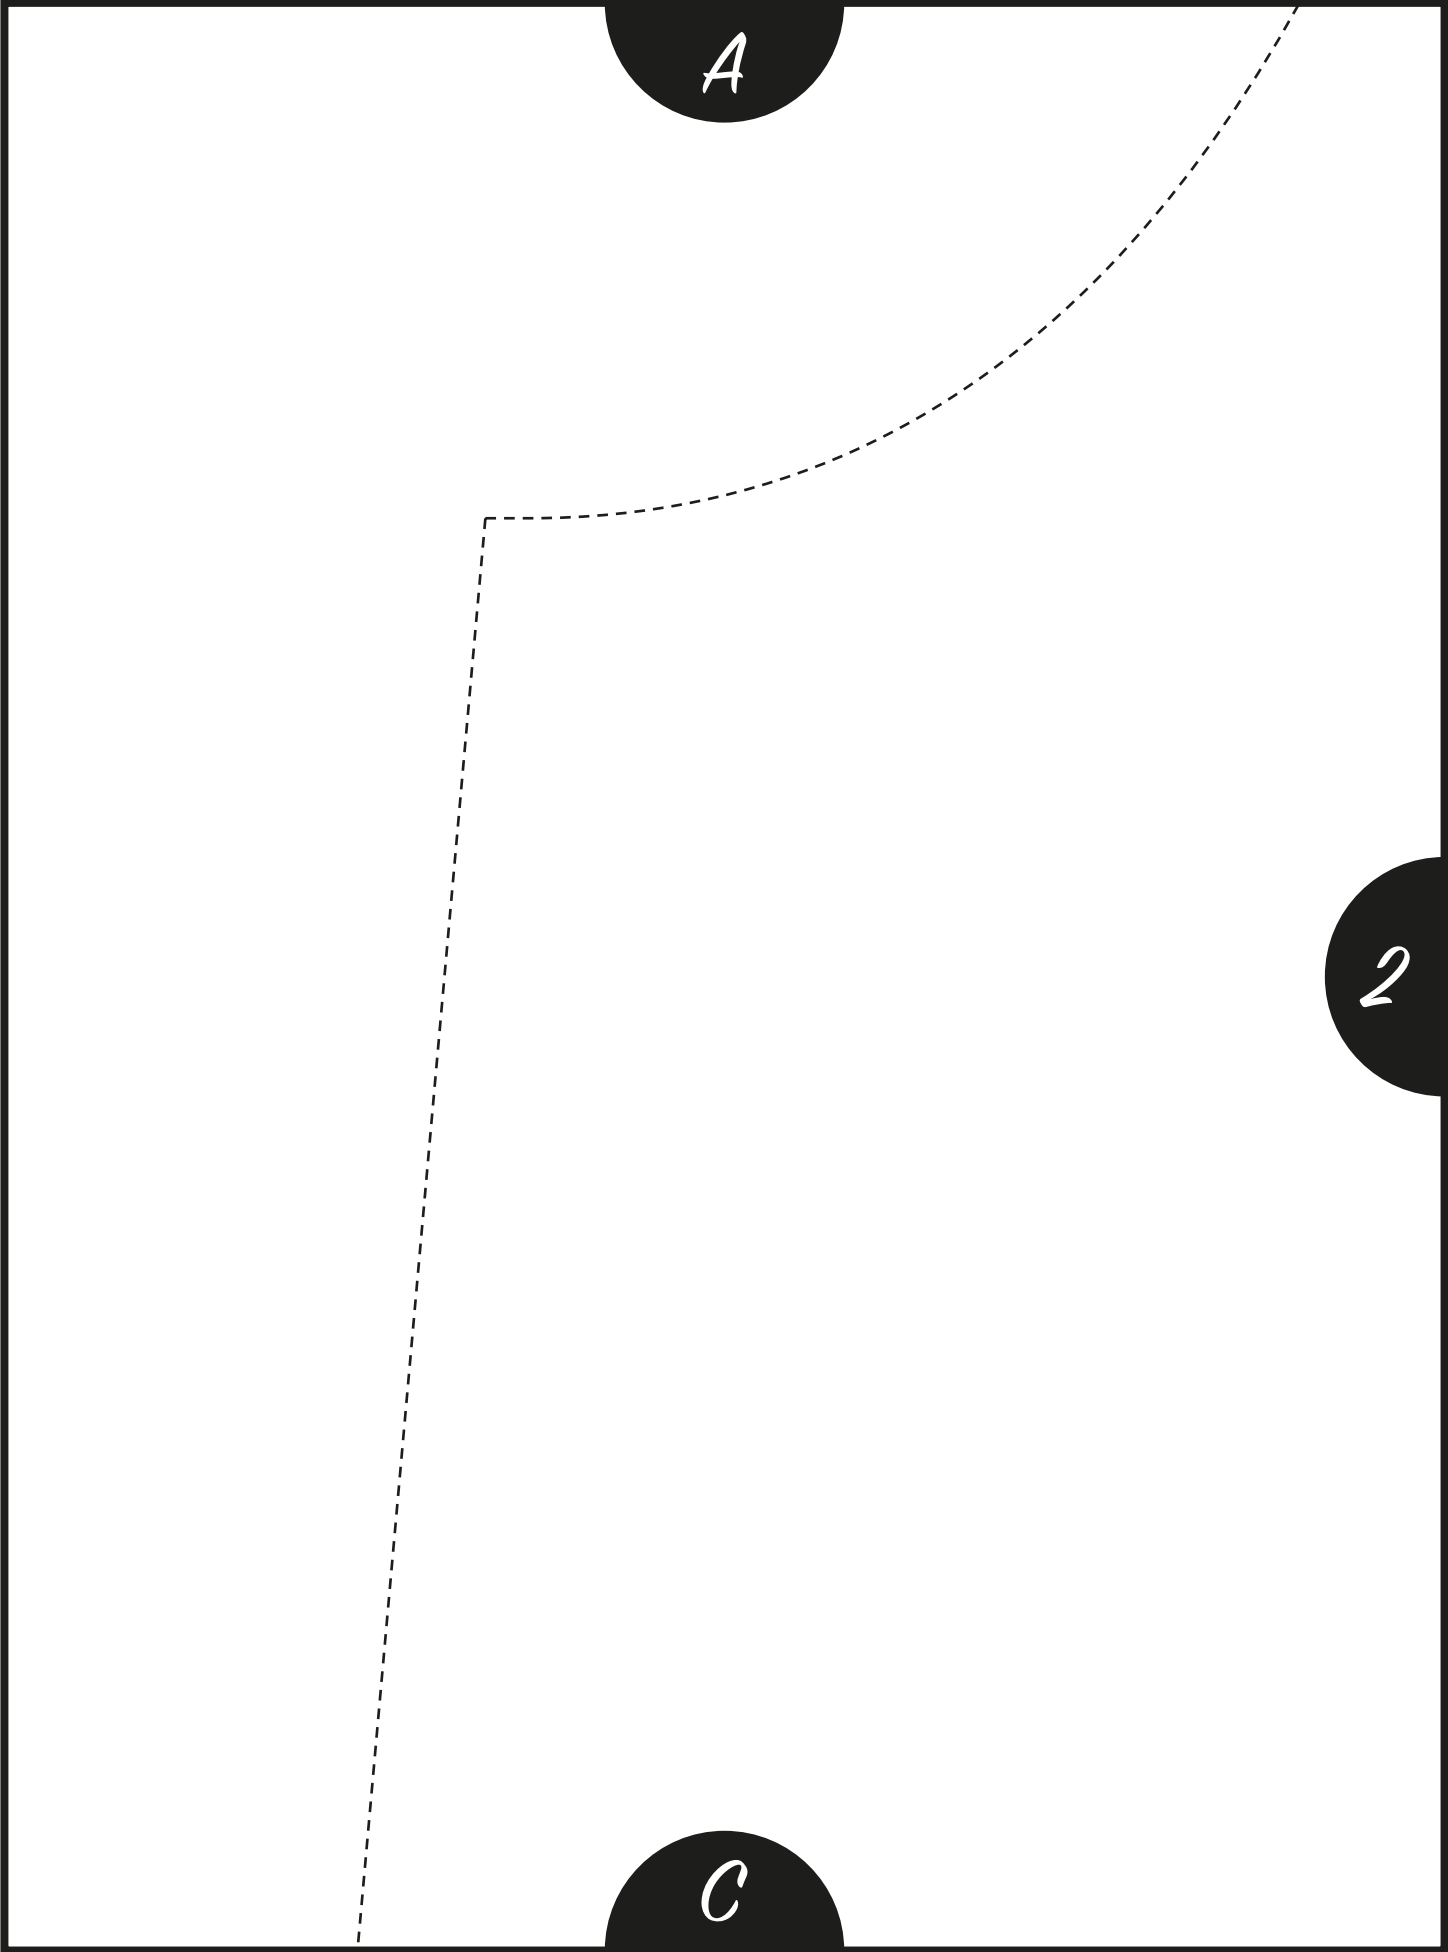

A

B

C

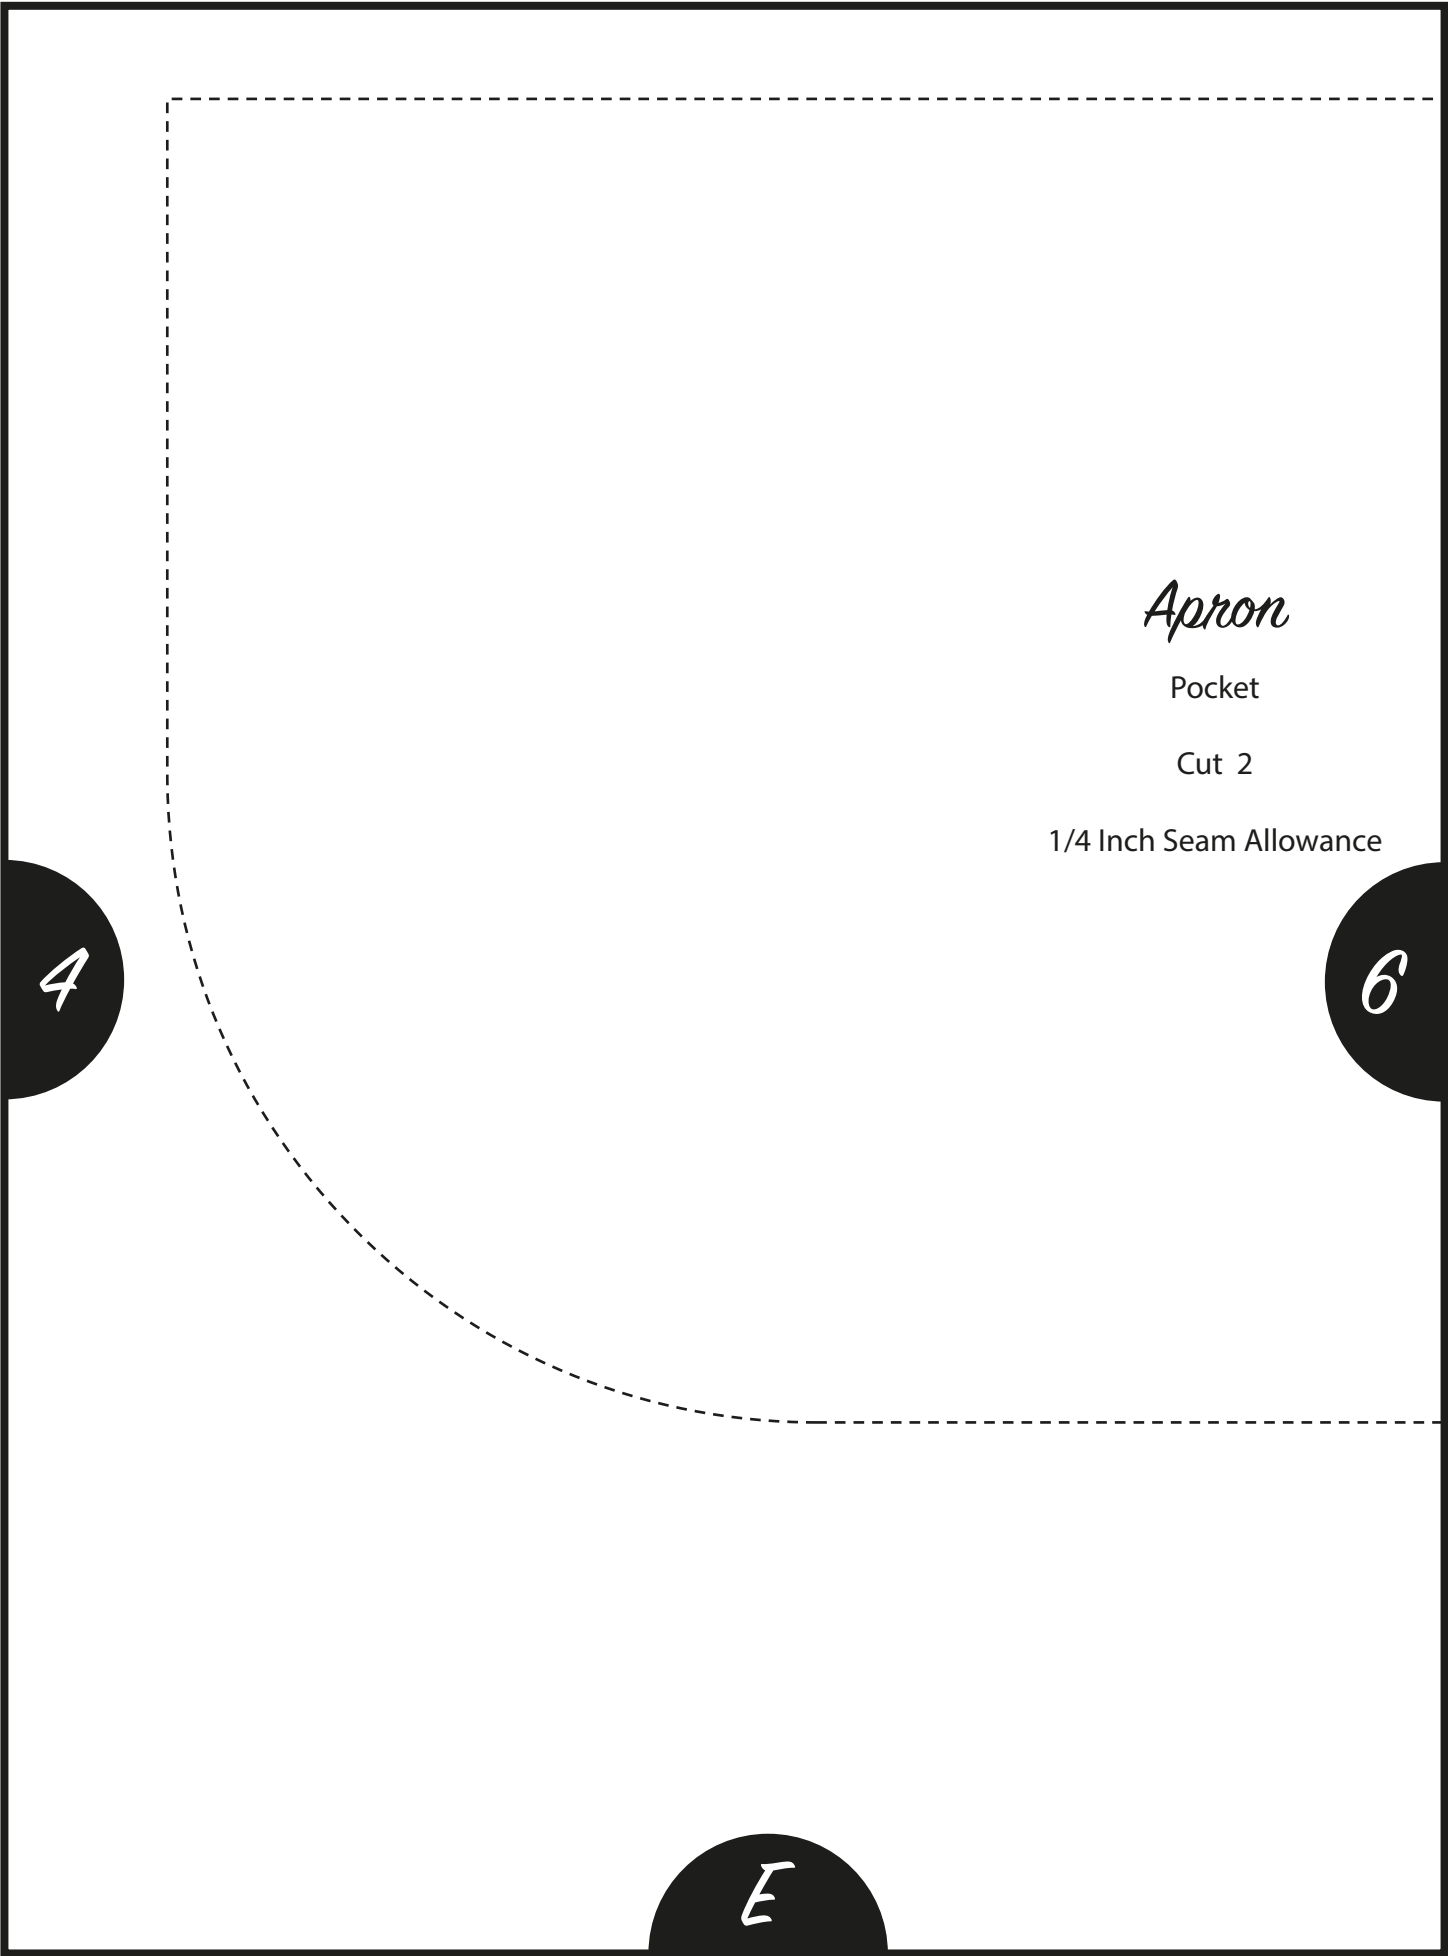

Apron

Pocket


Cut 2


1/4 Inch Seam Allowance

4

6

E

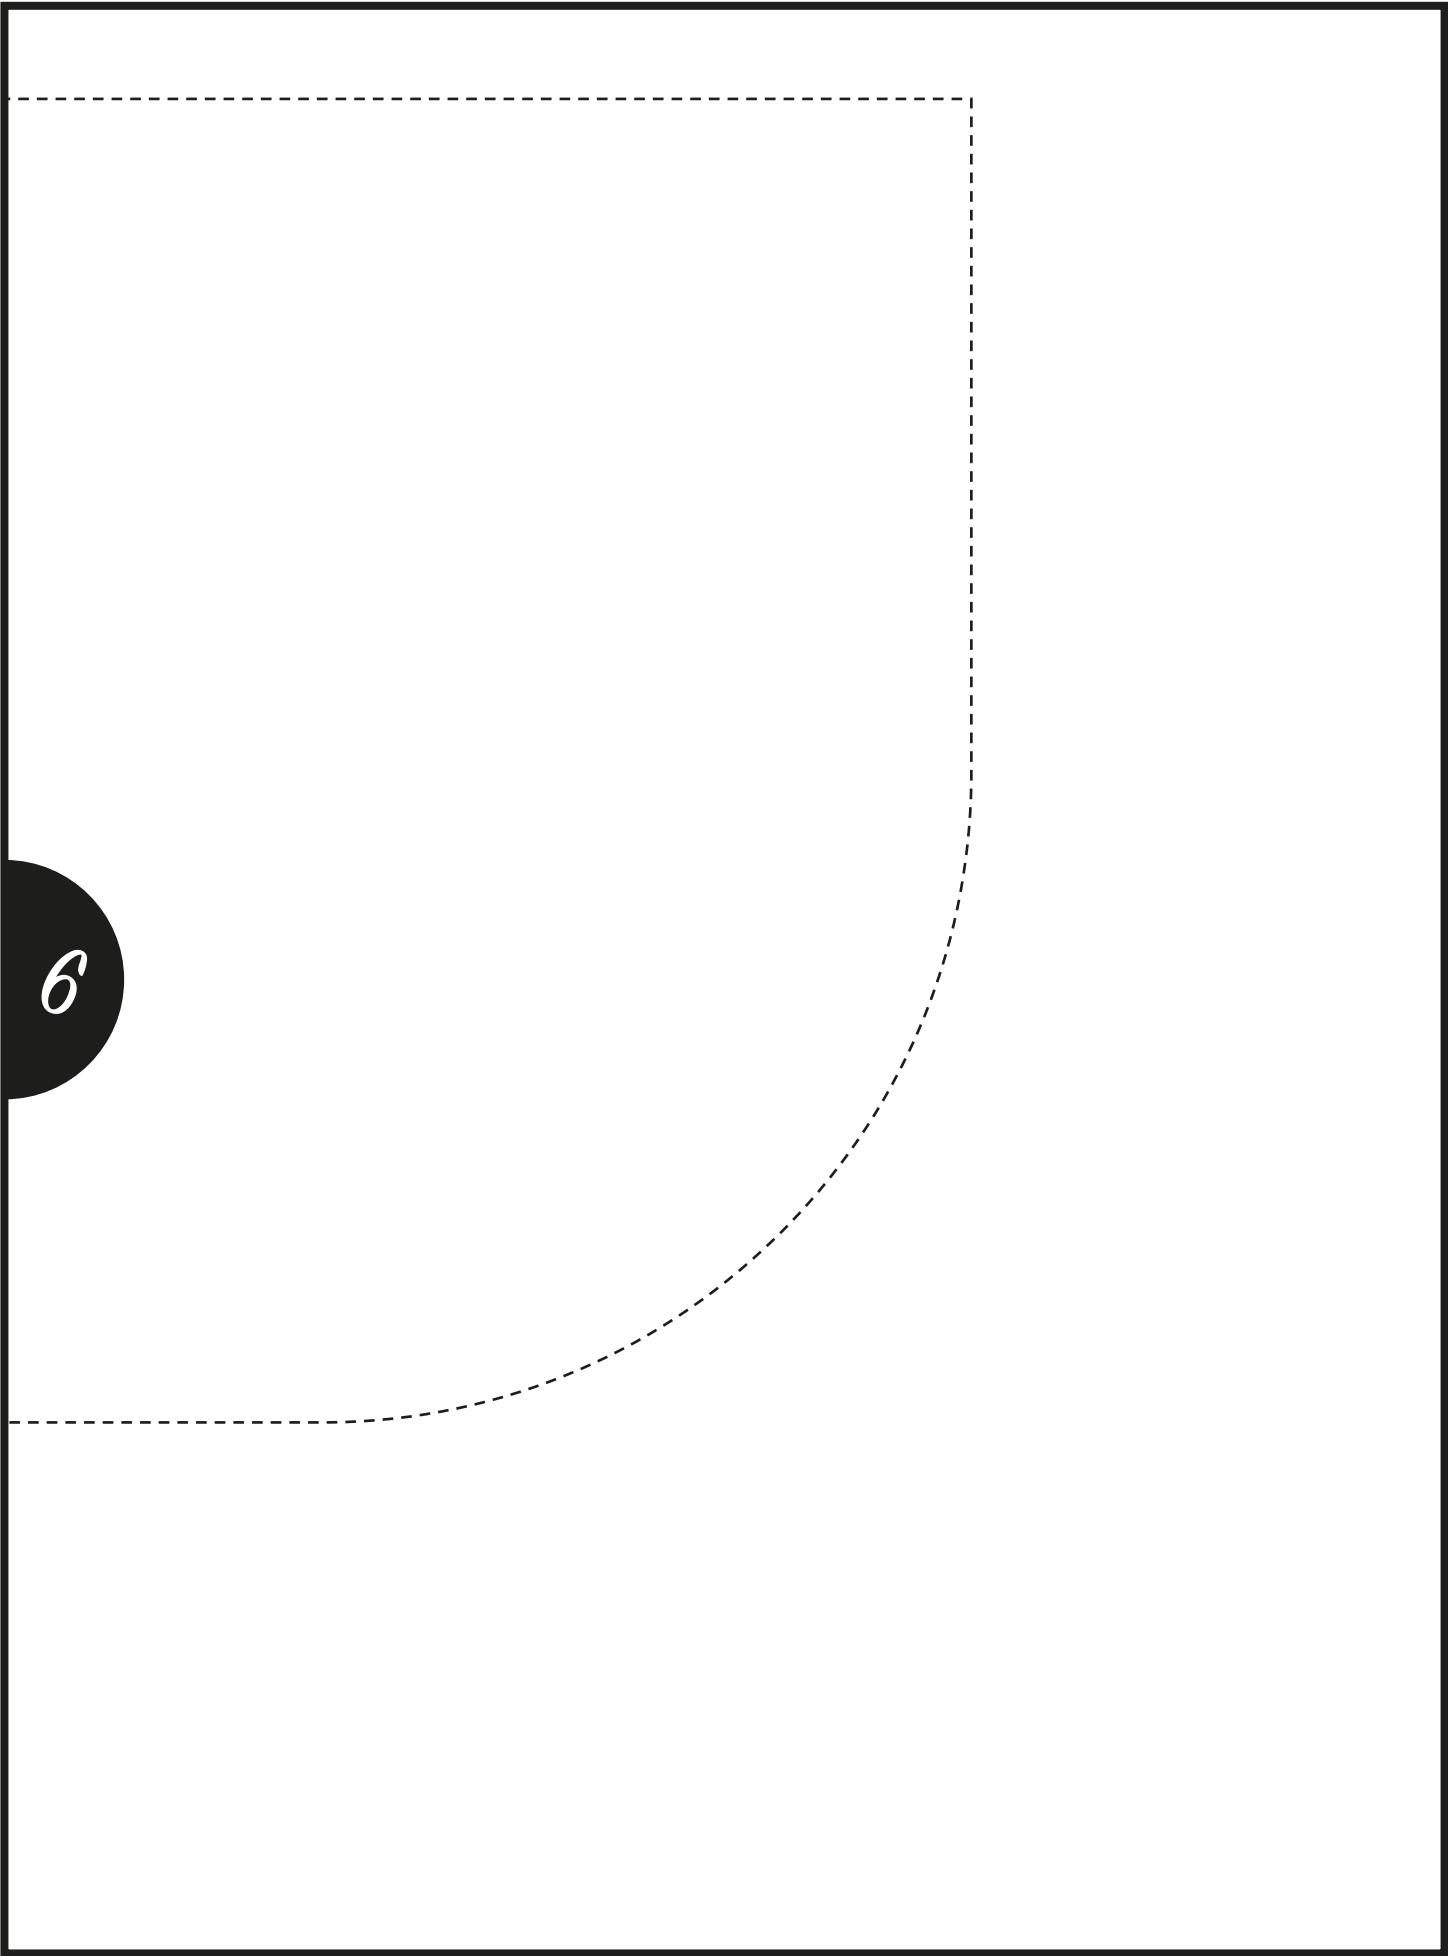

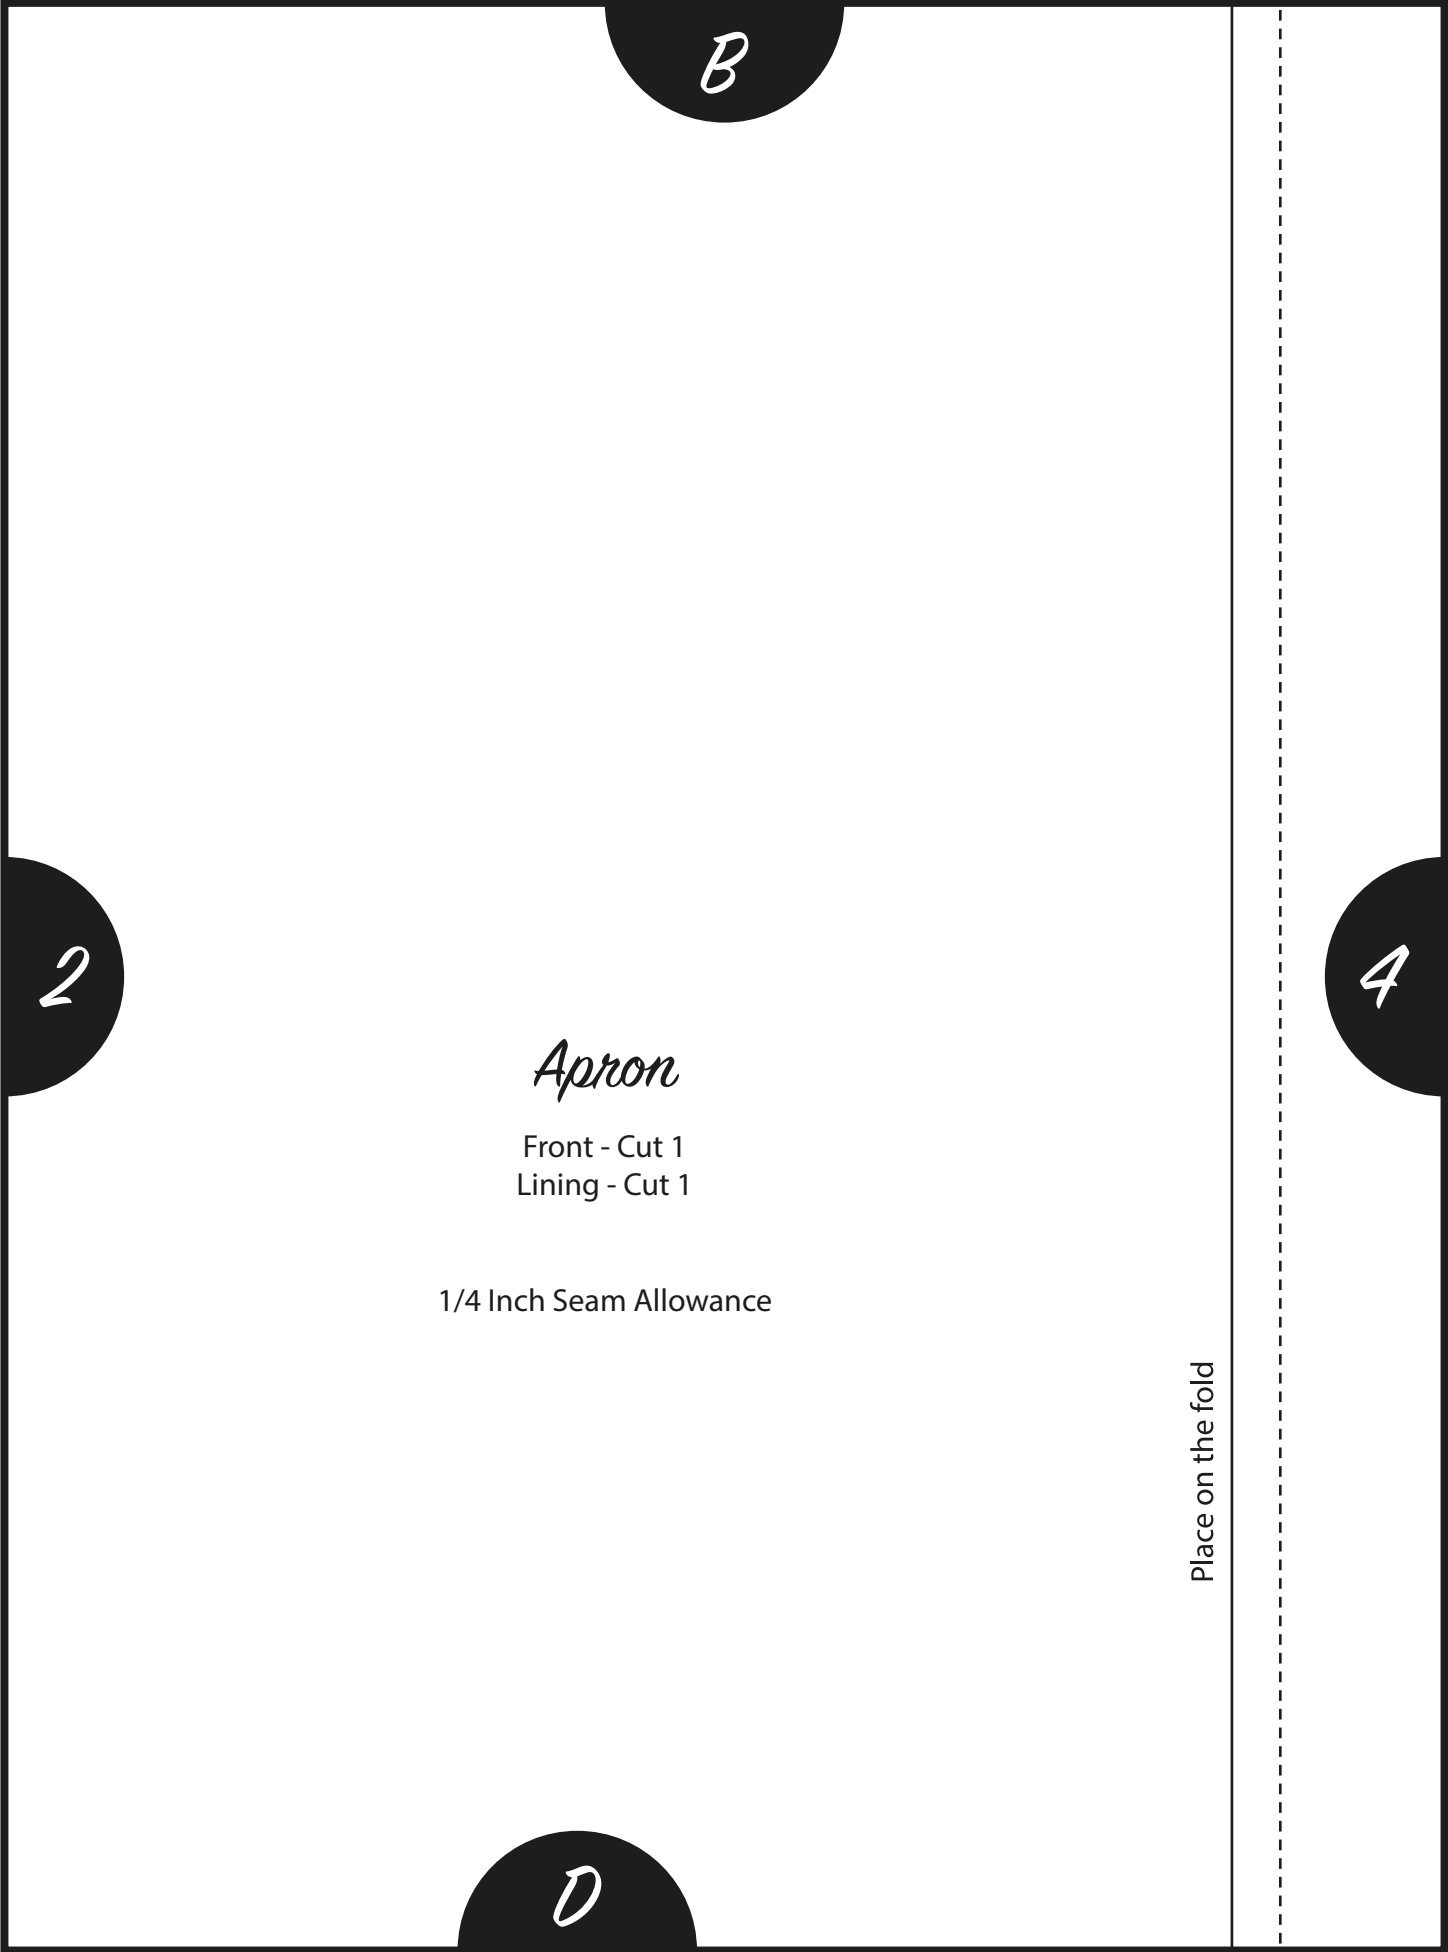

2

B

4


Apron

Front - Cut 1
Lining - Cut 1

1/4 Inch Seam Allowance

Place on the fold


D

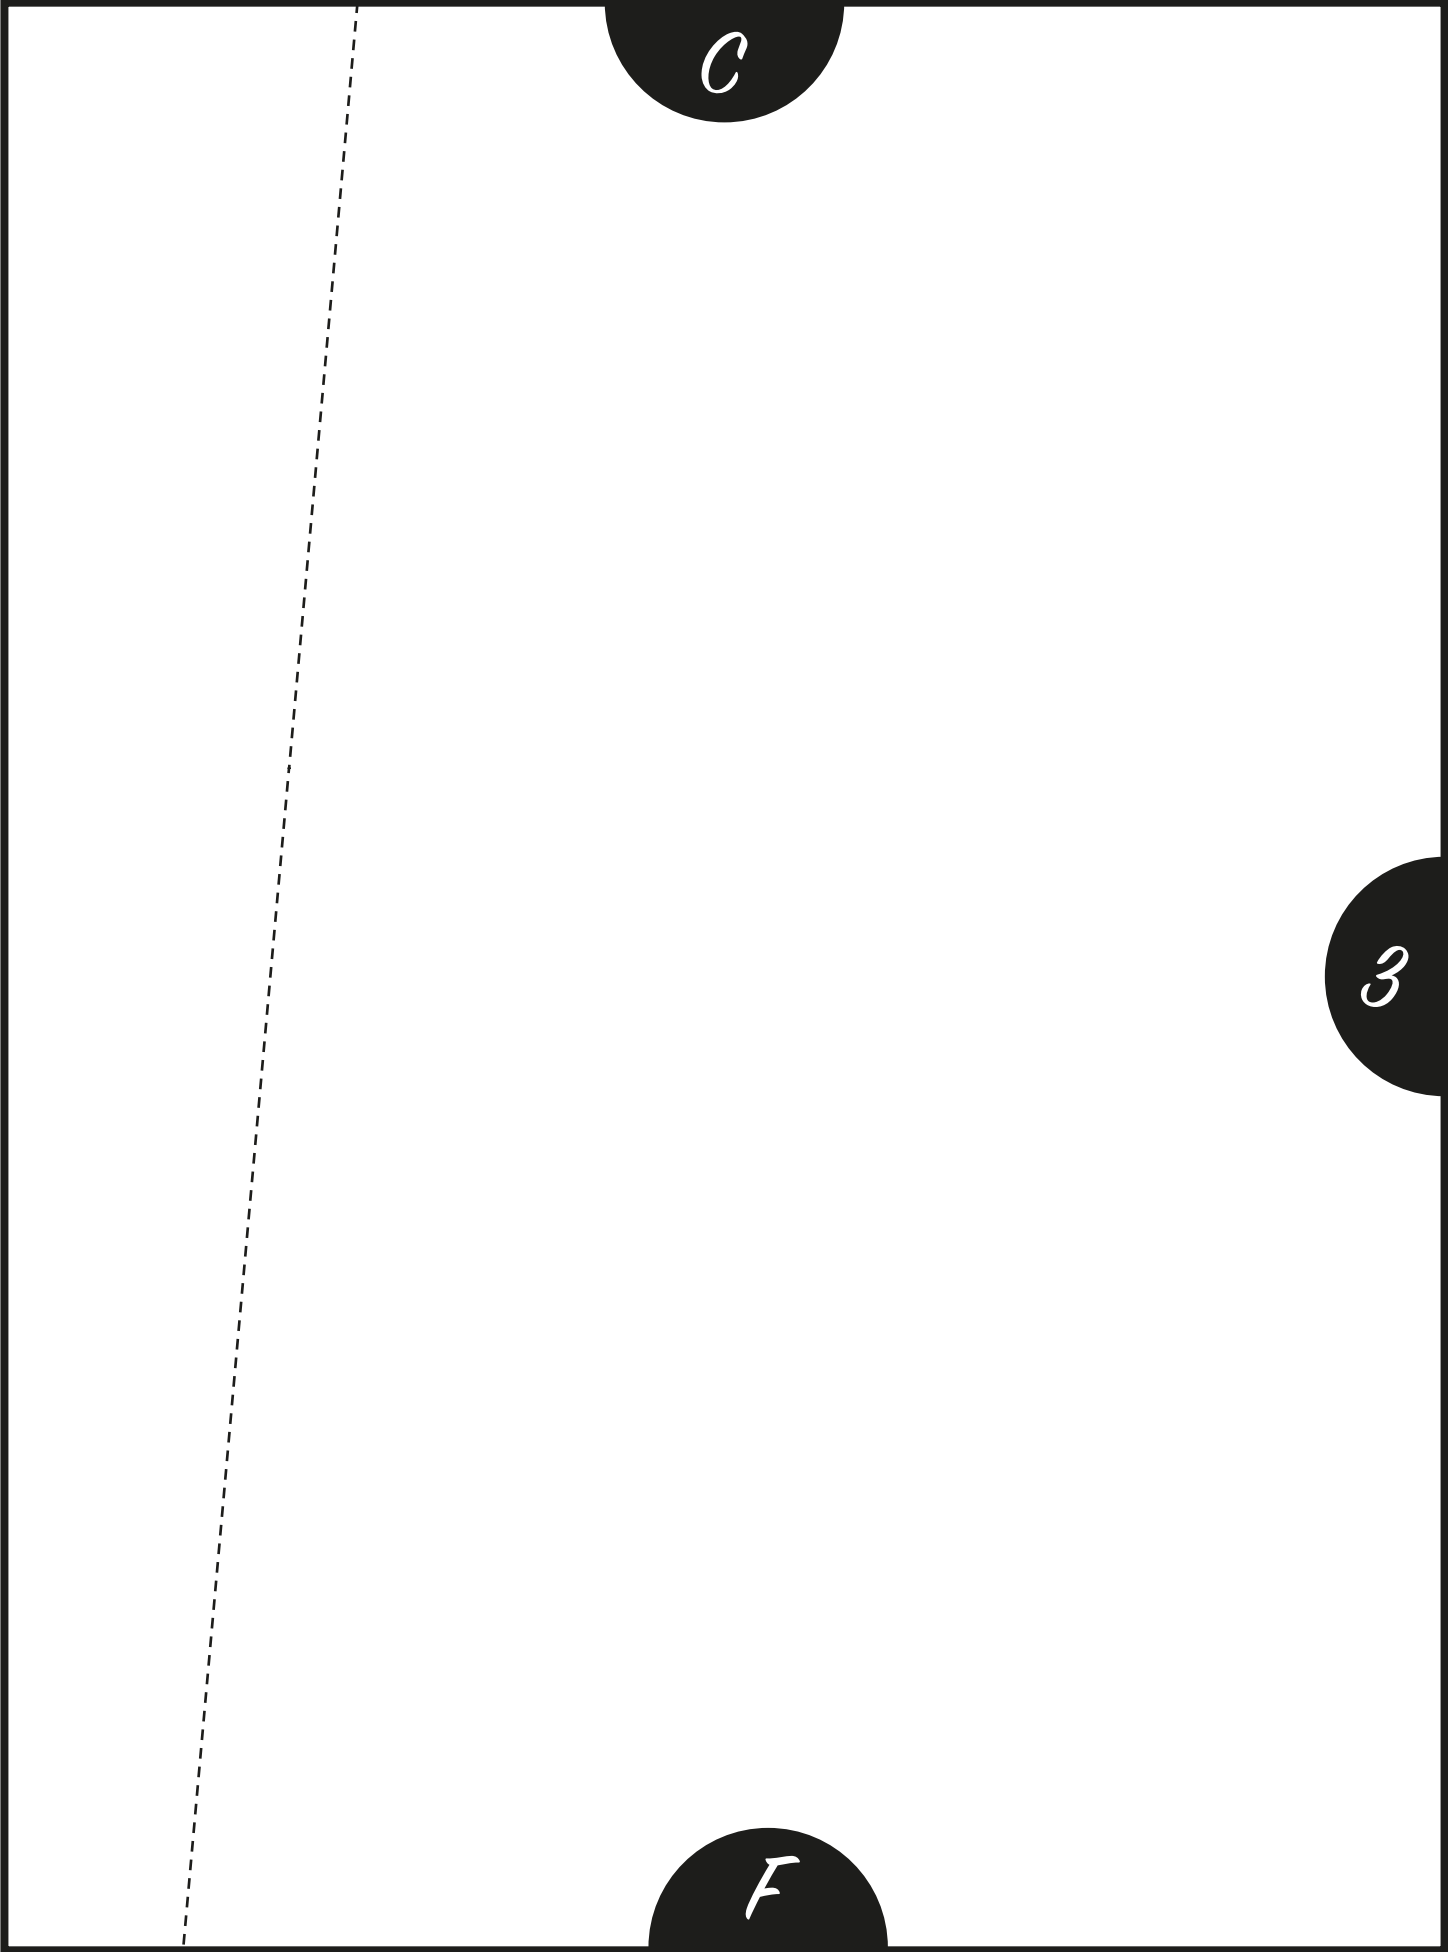

c

F

3

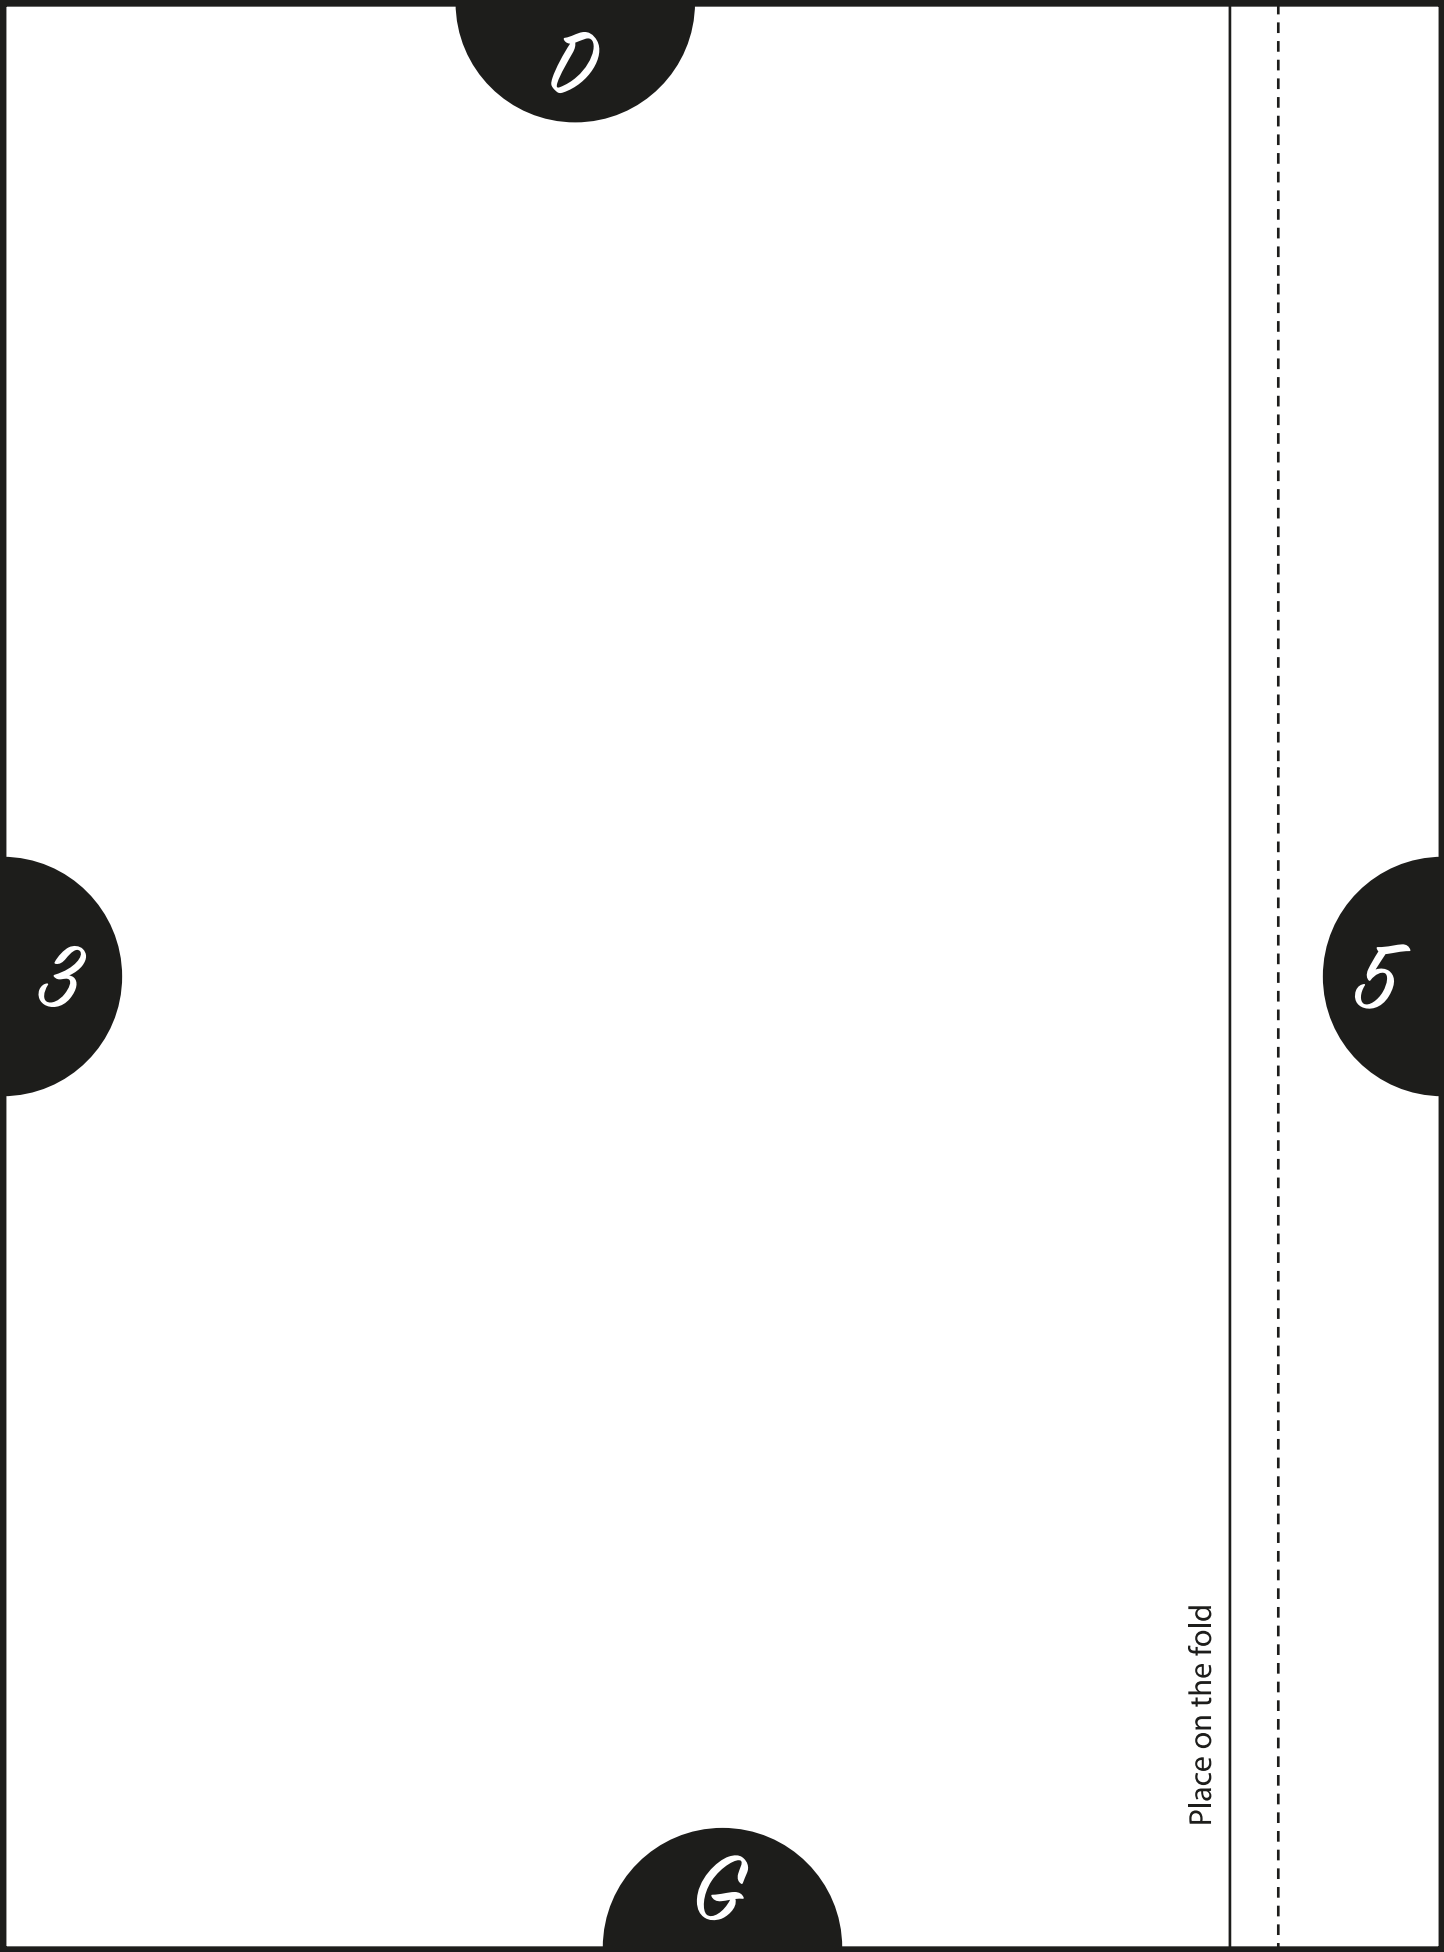

E

Apron

Side Straps

Cut 2

62" (157cm)

5

F

7

Apron

Strap Connector

Cut 2

G

7